 


Quick Start Guide

Overview

1. Lid switcher - Slide down to open the lid, so can put cassette in.
2. AUX port - Line out to earphone or an external speaker, or line in from audio source.
3. USB port
4. Volume control.
5. Window
6. Cassette operate buttons - See following details.
PLAY - press to play the tape.
DIR - Change the direction of cassette playing.
↔ - Auto Reverse switch, slide to engage Auto Reverse mode.
F.F - Fast forward.
REW - Rewind.
STOP - press to stop playing tape.
7. DC port - 5V 1A DC. USB power adapter is not included.

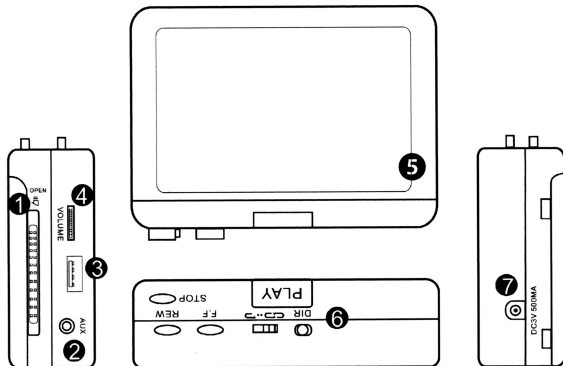 


Preparation before use

There are three power supply options.


Insert 2 AA batteries

You must open the lid of the cassette player to access the battery compartment. Please follow the polarity illustrations (+ or -) when inserting batteries.

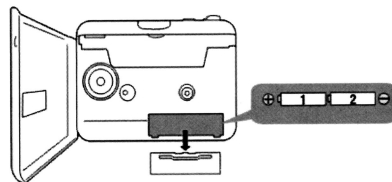


Powered by computer USB port

 Connect the included USB power cable with computer USB port and cassette player DC port.

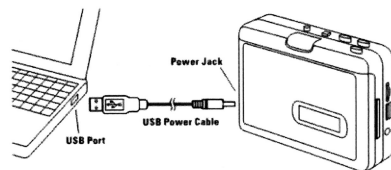

Powered by 5V/1A USB power adapter

 Connect the included USB power cable with USB power adapter/AC socket and cassette player DC port.

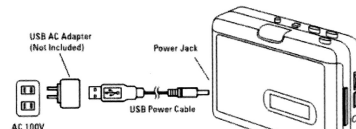

Cassette Operation

Play cassette tape:

- 1, Insert a cassette in.
- 2, Connect a speaker, headphone, or earbuds to "AUX" port of device.
- 3, Press the "PLAY" button on the top of device. You should hear the music from your cassette.
- 4, Adjust the volume to your comfort.

Specifications

Power supply: 2 AA battery, any USB port power supply (5V DC adapter, USB form computer, etc.)

Working time: 2 hours with battery

Audio channel: Stereo L/R

Bit Rate: 128Kbps

Dimensions: 113(L) x 82(W) x 32(H) mm

Weight: 186g (without battery)

Box Contents

Device

3.5mm earphone

USB power cable

Quick Start Guide